


## ENGLISH

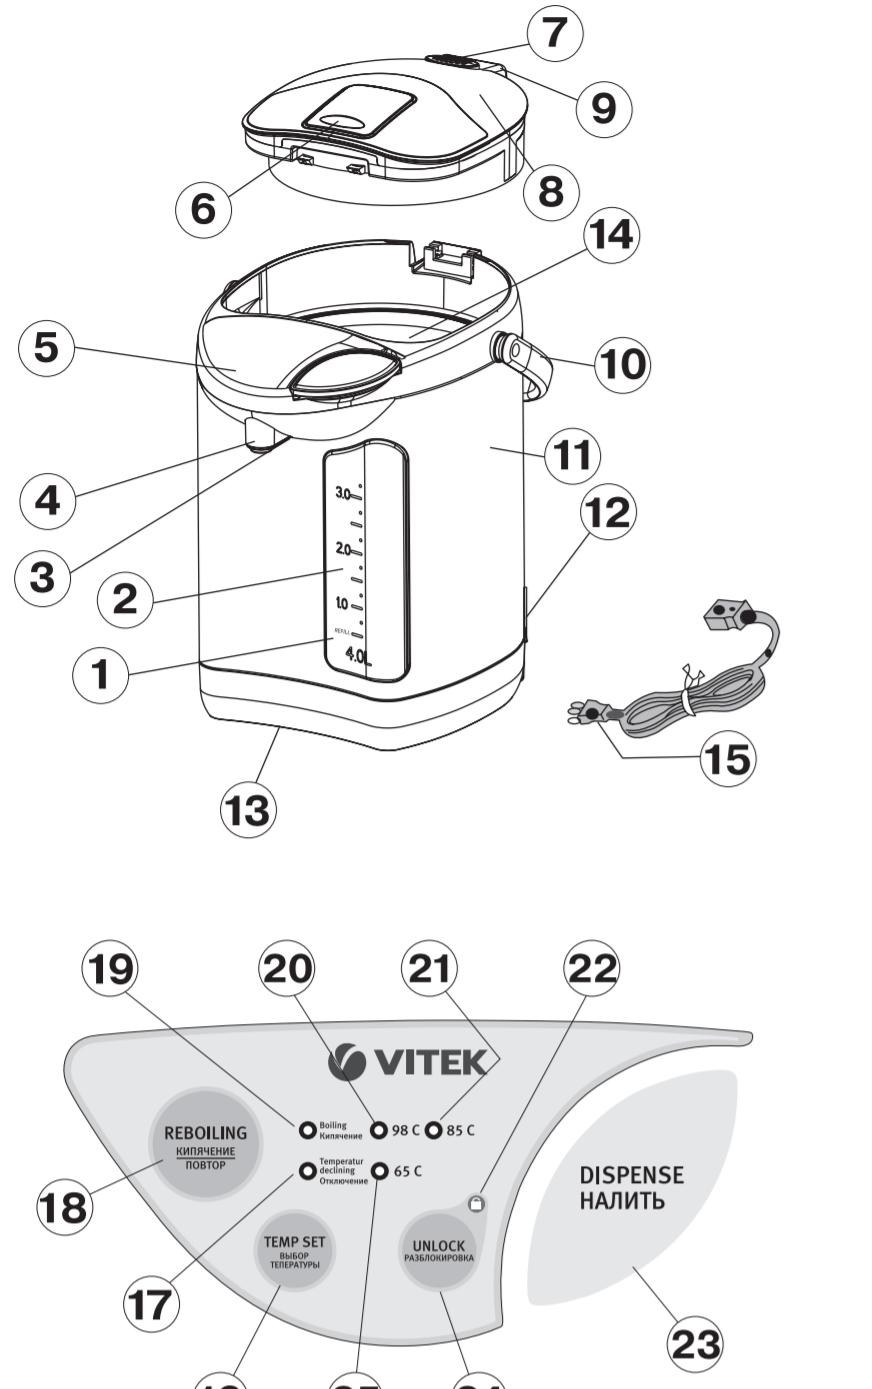

### THERMO POT

Electric water pot is intended only for water boiling. For proper and safe use of the unit, read this manual carefully.

### DESCRIPTION

1. "REFILL" mark
2. Water level scale
3. Control panel
4. Water spout
5. Lid opening button
6. Lid
7. Water level scale
8. Lid fastening place
9. Handle for carrying
10. Removable upper lid
11. Steam escape holes
12. Rotating base
13. Power cord
14. "FULL" mark
15. Power cord

### Control panel:

16. "TEMP-SET" button
17. "TEMP-DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

### ATTENTION!

Improper use of the unit may cause injuries or damages of the property.

### OPERATING INSTRUCTIONS

#### IMPORTANT SAFEGUARDS


- Before switching the unit on, read these instructions carefully.
- Make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- The power cord is equipped with a earth plug; never insert it into the socket with earth grounding.
- After water starts boiling, the unit will switch to the heating keeping mode, the indication (20, 21 or 25) will be flashing.
- Press the (18) "TEMP-SET" button to select water temperature, the corresponding indication (20, 21 or 25) will be flashing. When water temperature matches the preset temperature, the indication (20, 21 or 25) will be constantly flashing, with each decrease of temperature the heating mode will switch to the heating keeping mode, the indication (20, 21 or 25) will stop flashing.
- In the temperature keeping mode, when one of the indications (20, 21 or 25) is lighting, you can switch on the rebelling mode. Press the (18) "REBOIL" button, the indication (19) "BOILING" will light up.
- To switch off the thermo pot in the temperature keeping mode, press the (18) "REBOIL" button twice, in the boiling mode – once, the indication (17) "TEMP-DECLINING" will light up.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not leave the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Use the thermo pot only for water boiling, do not use to heat oil or other liquids.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not fill the thermo pot putting it under tap water; use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about operation, which can be caused by improper use of the unit.
- Do not allow children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not suppose water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings, otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not wash the unit in a dish washing machine.
- Spots on the inner surface of the thermo pot Under the influence of different additives, contained in water, inner surface may change its color.
- You can remove spots such as citric acid or vinegar.
- To remove lemon taste or vinegar taste, boil water and pour it away. Repeat the procedure until the taste disappears.
- Scale removal Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.
- To remove scale, fill the pot with water with vinegar dissolved in it in proportion 2:1 to the maximum mark. Boil water and leave that for a night. In the morning pour off water, fill the pot with water till max. mark, boil it and pour out water.
- You can use special substances for electric thermo pots to remove scale.
- After removal of scale, boil clear water and pour it out.
- Storage If you are not going to use the unit for a long time and want to take it away, make sure that it is empty.
- Keep the thermo pot in a dry cool place, out of reach of children.
- The unit is intended for household use only.

### FIRST USAGE

- Unpack the thermo pot.
- Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- Open the (8), by pressing the (6) button and hold the lid (8).
- Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket.
- Press the (18) button to switch on the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
- Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

This product conforms to the EMC Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC).

## DEUTSCH

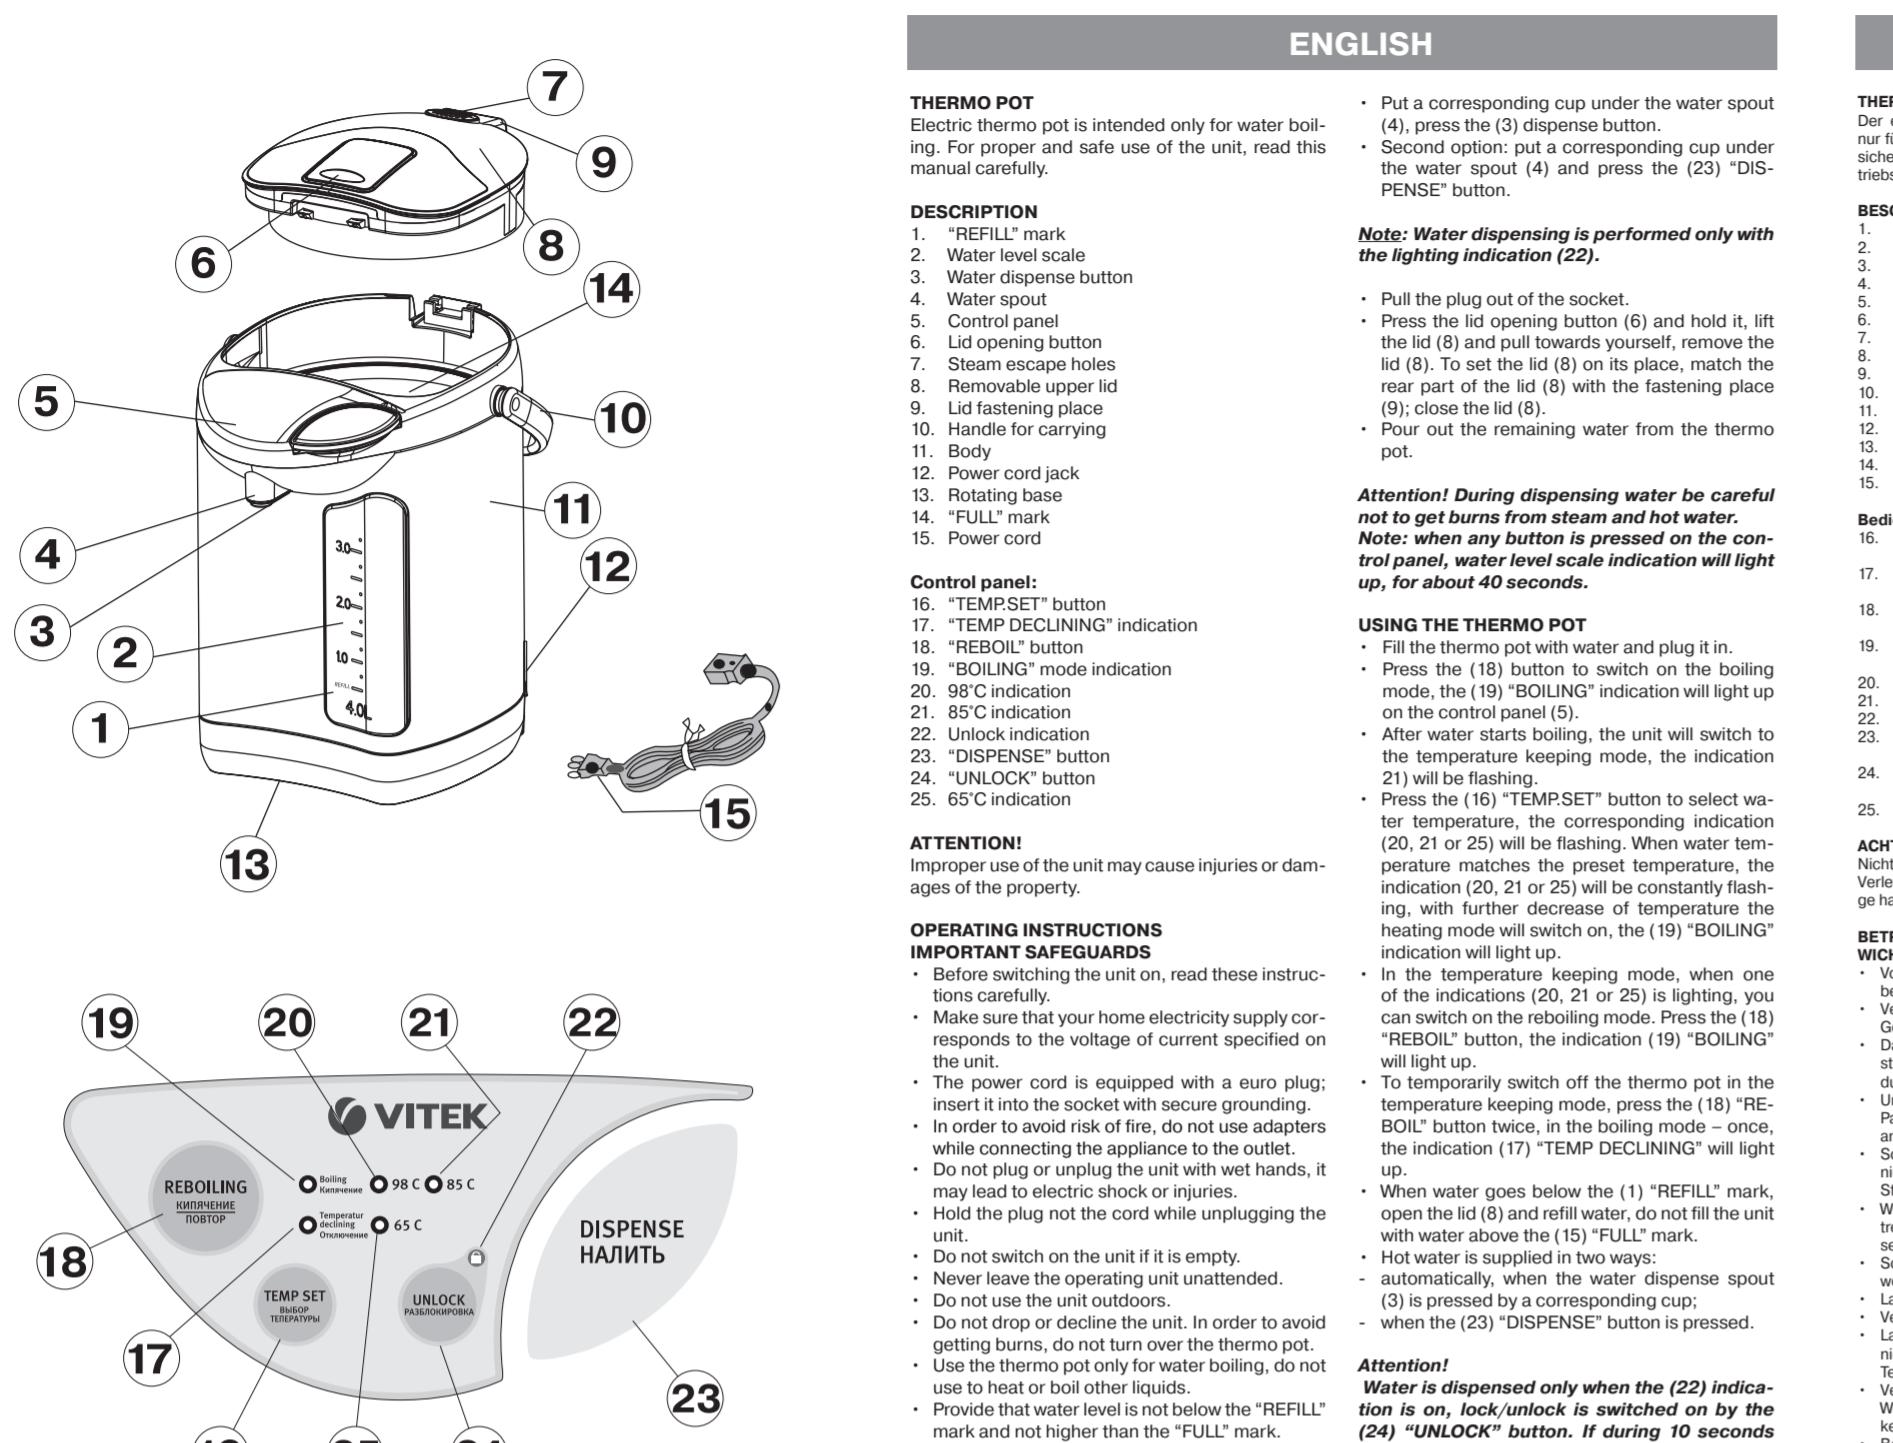

### THERMOPOT

Der elektrische Teekessel-Wärmebehälter (Thermopot) ist nur für Wassersieden vorgesehen. Um das Gerät richtig und sicher zu benutzen, untersuchen Sie aufmerksam diese Bedienungsanleitung.

### BESCHREIBUNG

1. "REFILL" mark
2. Water level scale
3. Control panel
4. Water spout
5. Lid opening button
6. Lid
7. Water level scale
8. Lid fastening place
9. Handle for carrying
10. Removable upper lid
11. Steam escape holes
12. Rotating base
13. Power cord
14. "FULL" mark
15. Power cord

### Control panel:

16. "TEMP-SET" button
17. "TEMP-DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

### ATTENTION! During dispensing water be careful not to get burns from steam and hot water.

Note: when any button is pressed on the control panel, water level scale indication will light up, for about 40 seconds.

### USING THE THERMOPOT


- Fill the thermo pot with water and plug it in.
- Press the (18) button to switch on the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the heating keeping mode, the indication (21) will be flashing.
- Press the (16) "TEMP-SET" button to select water temperature, the corresponding indication (20, 21 or 25) will be constantly flashing. When water temperature matches the preset temperature, the indication (20, 21 or 25) will be constantly flashing, with each decrease of temperature the heating mode will switch to the heating keeping mode, the indication (21) will stop flashing.
- In the temperature keeping mode, when one of the indications (20, 21 or 25) is lighting, you can switch on the rebelling mode. Press the (18) "REBOIL" button, the indication (19) "BOILING" will light up.
- To switch off the thermo pot in the temperature keeping mode, press the (18) "REBOIL" button twice, in the boiling mode – once, the indication (17) "TEMP-DECLINING" will light up.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not leave the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not fill the thermo pot putting it under tap water; use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about operation, which can be caused by improper use of the unit.
- Do not allow children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not suppose water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings, otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not wash the unit in a dish washing machine.
- Spots on the inner surface of the thermo pot Under the influence of different additives, contained in water, inner surface may change its color.
- You can remove spots such as citric acid or vinegar.
- To remove lemon taste or vinegar taste, boil water and pour it away. Repeat the procedure until the taste disappears.
- Scale removal Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.
- To remove scale, fill the pot with water with vinegar dissolved in it in proportion 2:1 to the maximum mark. Boil water and leave that for a night. In the morning pour off water, fill the pot with water till max. mark, boil it and pour out water.
- You can use special substances for electric thermo pots to remove scale.
- After removal of scale, boil clear water and pour it out.
- Storage If you are not going to use the unit for a long time and want to take it away, make sure that it is empty.
- Keep the thermo pot in a dry cool place, out of reach of children.
- The unit is intended for household use only.

### FIRST USAGE

- Unpack the thermo pot.
- Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- Open the (8), by pressing the (6) button and hold the lid (8).
- Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket.
- Press the (18) button to switch on the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
- Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

This product conforms to the EMC Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC).

## RУССКИЙ

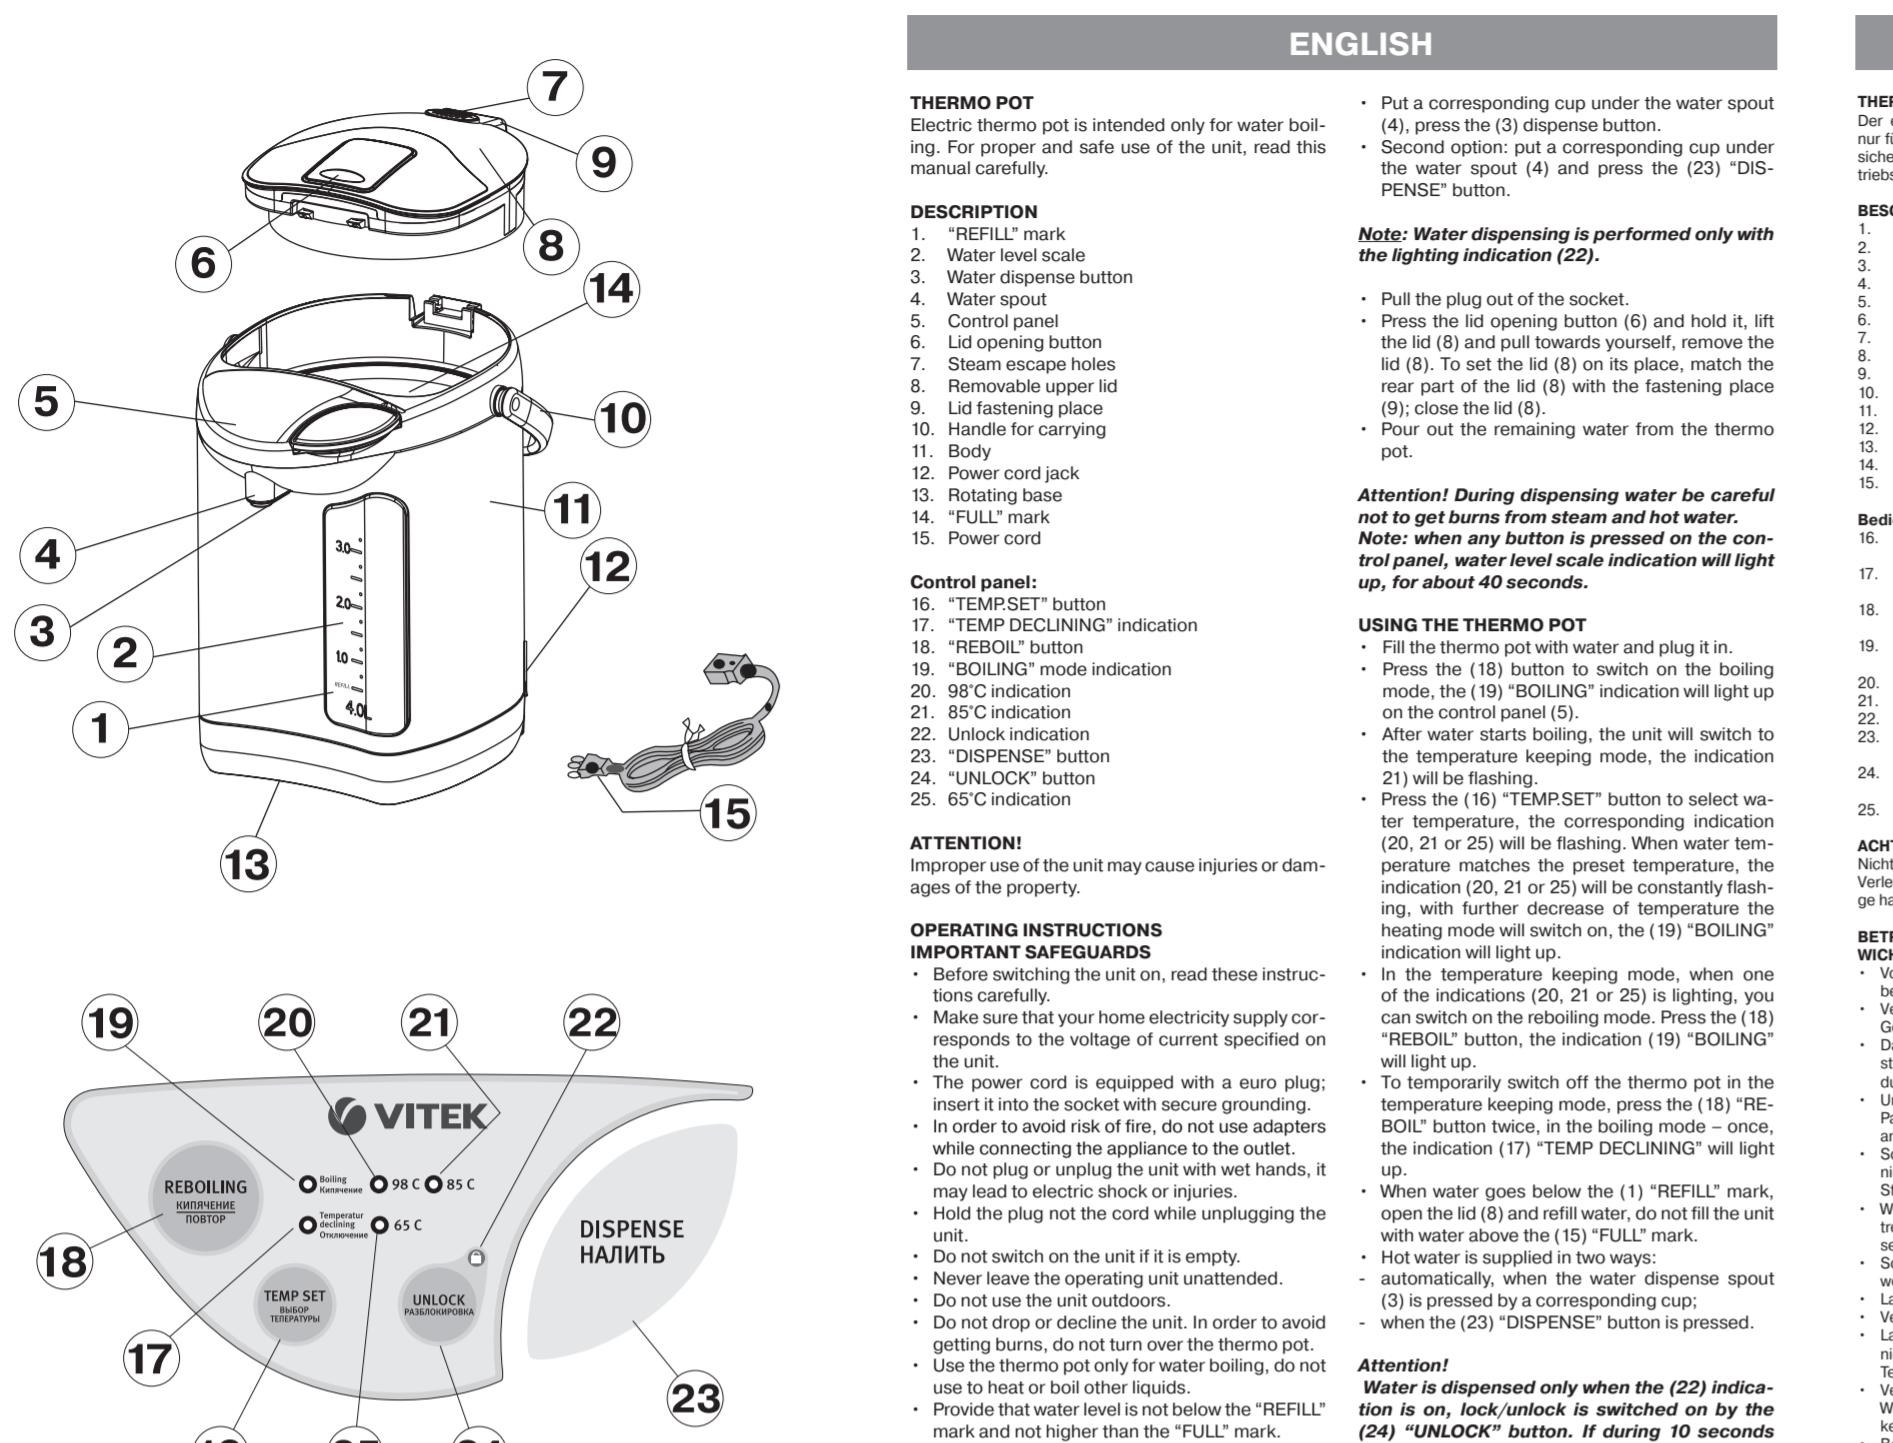

### ТЕРМОПОТ

Электрический термопот (термопот) предназначен только для кипячения воды. Для того чтобы правильно и безопасно пользоваться электроприбором, внимательно изучите данное руководство.

### ОПИСАНИЕ

1. "REFILL" mark
2. Water level scale
3. Control panel
4. Water spout
5. Lid opening button
6. Lid
7. Water level scale
8. Lid fastening place
9. Handle for carrying
10. Removable upper lid
11. Steam escape holes
12. Rotating base
13. Power cord
14. "FULL" mark
15. Power cord

### Control panel:

16. "TEMP-SET" button
17. "TEMP-DECLINING" indication
18. "REBOIL" button
19. "BOILING" mode indication
20. 98°C indication
21. 85°C indication
22. Unlock indication
23. "DISPENSE" button
24. "UNLOCK" button
25. 65°C indication

### ATTENTION! During dispensing water be careful not to get burns from steam and hot water.

Note: when any button is pressed on the control panel, water level scale indication will light up, for about 40 seconds.

### USING THE THERMOPOT

- Fill the thermo pot with water and plug it in.
- Press the (18) button to switch on the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the heating keeping mode, the indication (21) will be flashing.
- Press the (16) "TEMP-SET" button to select water temperature, the corresponding indication (20, 21 or 25) will be constantly flashing. When water temperature matches the preset temperature, the indication (20, 21 or 25) will be constantly flashing, with each decrease of temperature the heating mode will switch to the heating keeping mode, the indication (21) will stop flashing.
- In the temperature keeping mode, when one of the indications (20, 21 or 25) is lighting, you can switch on the rebelling mode. Press the (18) "REBOIL" button, the indication (19) "BOILING" will light up.
- To switch off the thermo pot in the temperature keeping mode, press the (18) "REBOIL" button twice, in the boiling mode – once, the indication (17) "TEMP-DECLINING" will light up.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- Hold the plug not the cord while unplugging the unit.
- Do not leave the unit if it is empty.
- Never leave the operating unit unattended.
- Do not use the unit outdoors.
- Do not drop or decline the unit. In order to avoid getting burns, do not turn over the thermo pot.
- Do not connect the power cord with wet hands, it may lead to electric shock or injuries.
- When water goes below the (1) "REFILL" mark open the lid (8) and refill water, do not fill the unit with water above the (15) "FULL" mark.
- Do not fill the thermo pot putting it under tap water; use a special cup for it.
- Put the unit on the flat stable surface.
- Do not use the unit near walls and furniture. Steam that goes out may lead to deformation or other damages of the walls and furniture.
- Do not use the unit near heat sources or open flame.
- Close supervision is necessary when children or disabled persons are near the unit. This unit is not intended for use by children or disabled persons unless they are given all necessary instructions on safety measures and information about operation, which can be caused by improper use of the unit.
- Do not allow children to use the unit as a toy.
- Keep the unit out of reach of children.
- Provide that the power cord is not hanging over the table and make sure that it does not touch heated surfaces.
- Do not open the lid while boiling and do not suppose water.
- Do not rotate the unit while supplying water.
- Do not make efforts to close the lid. Close the lid firmly.
- Keep your hands away from steam openings, otherwise you can get burns. Do not block steam openings with foreign objects.
- Do not wash the unit in a dish washing machine.
- Spots on the inner surface of the thermo pot Under the influence of different additives, contained in water, inner surface may change its color.
- You can remove spots such as citric acid or vinegar.
- To remove lemon taste or vinegar taste, boil water and pour it away. Repeat the procedure until the taste disappears.
- Scale removal Scale, appearing inside the pot, influences water taste, and disturbs heat exchange between water and the heating element that can lead to its overheating and malfunction.
- To remove scale, fill the pot with water with vinegar dissolved in it in proportion 2:1 to the maximum mark. Boil water and leave that for a night. In the morning pour off water, fill the pot with water till max. mark, boil it and pour out water.
- You can use special substances for electric thermo pots to remove scale.
- After removal of scale, boil clear water and pour it out.
- Storage If you are not going to use the unit for a long time and want to take it away, make sure that it is empty.
- Keep the thermo pot in a dry cool place, out of reach of children.
- The unit is intended for household use only.

### FIRST USAGE

- Unpack the thermo pot.
- Before switching on the unit, make sure that your home electricity supply corresponds to the voltage of current specified on the unit.
- Open the (8), by pressing the (6) button and hold the lid (8).
- Fill the pot with water, using a special cup, do not overfill, fill to the (14) "FULL" mark. Insert the power cord plug (15) into the outlet (12) on the case, and the plug into the socket.
- Press the (18) button to switch on the boiling mode, the (19) "BOILING" indication will light up on the control panel (5).
- After water starts boiling, the unit will switch to the temperature keeping mode, the indication (21) will be flashing.
- Pour out water, press the (24) "UNLOCK" button to unlock water dispensing pump, the indication (22) will light up.

This product conforms to the EMC Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC).

## КАЗАК

