



ENGLISH

KETTLE

Description

1. Kettle body
2. Mesh filter
3. Lid opening button
4. Lid
5. Water level scale
6. Handle
7. Illuminated On/Off button
8. Base
9. Cord storage

Attention!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD contact a specialist.

SAFETY MEASURES

Before using the electric kettle, read this instruction carefully. Keep this instruction for further reference.

Use the electric kettle for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to her/his property.

• Make sure that the kettle operating voltage corresponds to the voltage of your mains.

• Power cord is equipped with «Euro plug» plug into the socket with reliable grounding contact.

• Do not immerse the kettle and base into water or any other liquids.

• Do not wash the kettle and base in a dishwashing machine.

• Wipe the outer surface of the kettle with a damp cloth or a sponge. Use soft detergents to remove dirt; do not use metal brushes and abrasives.

• To avoid fire or electric shock do not use adapters for plugging the unit in.

• Do not use the kettle in bathrooms. Do not use it near swimming pools or other containers filled with water.

• Do not place the kettle near heat sources and open flames.

• Do not use the kettle outdoors.

• Do not touch the kettle body or handle with wet hands.

• Do not leave the operating kettle unattended.

• Place the kettle on a flat stable surface; do not place the kettle on top of the table.

• Before switching the kettle on make sure that it is not near children.

• Use only the base supplied with the unit.

• Do not let the cord hang from the edge of the table and make sure it does not touch hot surfaces.

• You can adjust the power cord length,

winding it around the base.

• Do not switch the kettle if it is empty.

• Do not fill the kettle with water when it already stands on the base.

• Do not use the kettle if the lid is not closed tightly.

• Use the kettle only for water boiling. It is prohibited to boil oil or other liquids.

• Ensure that water level in the kettle is not below the minimal mark -0.5L- and not above the maximal mark -MAX-. If water level exceeds the maximal mark, boiling water can splash out.

• When water boils over, do not bend over the kettle's spout while it is operating.

• Do not open the kettle lid while water is boiling.

• Do not touch hot surfaces of the kettle, take it only by the handle.

• Be careful while carrying the kettle filled with boiling water.

• Always unplug the unit before cleaning; the unit should be also unplugged when you do not use the kettle. When unplugging the unit pull the plug, not the cord.

• To avoid electric shock do not immerse the unit into water or any other liquids.

• Do not wash the kettle and base in a dishwashing machine.

• Do not allow children to use the kettle as a toy.

• For safety reasons do not leave polyethylene bags, used as a packaging, unattended.

• **Attention! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

This unit is not intended for usage by children or disabled persons unless they are given all the necessary and understandable instructions by a person who is responsible for their safety on usage measures and information about danger that can be caused by improper usage of the unit.

From the point of view of checking the power cord insulation, the power plug should not have any damages.

Do not use the kettle if its body, base, power plug or power cord have damages.

• Do not repair the unit by yourself. If you find any damages, unplug the kettle and apply to an authorized service center.

THE UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

— Unpack the kettle.

— Make sure that operating voltage of the unit corresponds to your mains.

— Insert the power plug into the mains socket.

— Fill the kettle with water till the base (8), open the lid (4) by pressing the lid opening button (3).

— Place the kettle with water till the «MAX» mark on the water level scale (5), close the lid (4), place the kettle on the base (8). Make sure that the kettle lid (4) is closed tightly.

— Switch on the kettle by pressing the button (7).

— Once water starts boiling, the kettle will switch off automatically. Pour out water and repeat the boiling procedure 2-3 times.

Note: Before using the kettle make sure that the On/Off button (7) is not blocked by any foreign objects, and the lid (4) is tightly closed, otherwise auto switch off of kettle is not possible.

Stecken Sie den Netzstecker in die Steckdose.

TECHNISCHE EIGENSCHAFTEN

Power supply: 220-240 V ~ 50 Hz

Power: 1850-2200 W

Maximal water capacity: 1.7 l

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

Unit operating life is 5 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

This product conforms to the EMC Directive as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

CE

Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

Unit operating life is 5 years

Unit intended for household usage only

Before the first use

After unit transportation or storage at low temperature it is necessary to keep it for at least two hours at room temperature before switching on.

— Unpack the kettle.

— Make sure that operating voltage of the unit corresponds to your mains.

— Insert the power plug into the mains socket.

— Fill the kettle with water till it is off the base (8) and open the lid (4) by pressing the lid opening button (3).

— Place the kettle with water till the «MAX» mark on the water level scale (5), close the lid (4), place the kettle on the base (8). Make sure that the kettle lid (4) is closed tightly.

— Switch on the kettle by pressing the button (7).

— Once water starts boiling, the kettle will switch off automatically. Pour out water and repeat the boiling procedure 2-3 times.

Note: Before using the kettle make sure that the On/Off button (7) is not blocked by any foreign objects, and the lid (4) is tightly closed, otherwise auto switch off of kettle is not possible.

Das vorliegende Produkt entspricht den Anforderungen der elektromagnetischen Verträglichkeit, die in 2004/108/EC - Richtlinie des Rates und den Vorschriften 2006/95/EC über die Niederspannungsgeräte vorgesehen sind.

CE

Produktvorschriften für die Nutzungsdauer des Geräts beträgt 5 Jahre

DAS GERÄT IST NUR FÜR DEN GEBRAUCH IM HAUSHALT GEIGEN

Gewährleistung

Aufstatische Bedingungen der Gewährleistung kann man beim Händler, der diese Geräte verkauft hat, bekommen. Bei beliebiger Anspruchserhebung soll man während der Laufzeit der vorliegenden Gewährleistung den Check oder die Quittung über den Kauf vorzeigen.

Garantiezeit

Nachdem das Gerät unter niedrigen Temperaturen transportiert oder aufbewahrt wurde, lassen Sie es vor der Nutzung bei der Raumtemperatur für nicht weniger als zwei Stunden stehen.

— Nehmen Sie den Netzstecker aus der Verpackung heraus.

— Vergewissern Sie sich, dass die Betriebsspannung des Geräts und die Netzspannung übereinstimmen.

— Stecken Sie den Netzstecker in die Steckdose.

TECHNISCHE EIGENSCHAFTEN

Stromversorgung: 220-240 V ~ 50 Hz

Leistung: 1850-2200 W

Maximales Fassungsvermögen: 1.7 l

Der Hersteller behält sich das Recht vor, Design und technischen Eigenschaften des Geräts ohne vorbehaltliche Änderungen zu ändern.

TECHNISCHE HAARAKTERISTIKI

Электроплитка: 220-240 В ~ 50 Гц

Мощность: 1850-2200 Вт

Максимальный объем воды: 1,7 л

Производитель оставляет за собой право изменять характеристики устройства без предварительного уведомления.

СЛУЖБЫ ПРИБОРА — 5 лет

ГАРАНТИИ

Служба поддержки клиентов — 1 год.

Несколько дней

— Контактная информация

— Адреса сервисных центров

— Телефон горячей линии

— Адреса сервисных центров

