

viconte

**Cake maker
Instruction manual**

**Кексница
Руководство пользователя**

VC-154




Благодарим Вас за покупку продукции VICONTE

EN

In order to obtain ultimate output from your appliance, please read carefully this user's manual and save it for further use.

DESCRIPTION

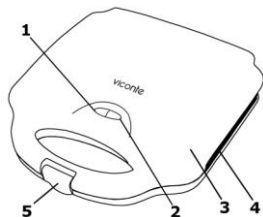

1. Indicator of heating
2. Indicator of work
3. Main body
4. Heating plates
5. Blocking lock

IMPORTANT SAFETY INSTRUCTIONS

- Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazard. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance. We do not accept

responsibility for damage to the product, persons or other items, caused by misuse, abuse or non-compliance with these instructions.

- Make sure that the voltage indicated on the appliance corresponds with the mains voltage in your home.
- Device is for household use only. Do not use it for commercial or industrial purposes.
- Plug your device to a grounded socket. To prevent harming your appliance do not use extension cords that supply insufficient current. When using extension cords, make sure to use grounded socket.
- Do not place the appliance over or near direct heat sources such as a stove, heating oven, etc.
- Ensure that the appliance is placed on a firm and flat surface. Do not put it on the edge of a table or bench. The least blow or knock may overturn it.
- Do not let cord hang over edge of table or counter or touch any other appliances.
- Avoid actions that may harm or damage the cord or plug of your device .Do not carry your appliance by holding from the cord. To unplug the device, hold the plug and never pull by the cord.
- Never interfere with your appliance except for the purposes of cleaning and maintenance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Such as by dropping down, etc. Do not attempt to repair it by yourself.
- Always hold your appliance by its handle. During an operating its outer surface

may be hot.

- Unplug from outlet when not in use and before cleaning. Allow it to cool down completely before cleaning the appliance.
- Do not leave the appliance unattended while plugged in.

WARNING: Do not operate VC-154 in the vertical position, this is for storage only.

BEFORE FIRST USE

- Remove all package.
- Clean the cooking plates by wiping a sponge or cloth dampened in warm water. DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES.
- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil. Notice: When your VC-154 is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

INSTRUCTIONS FOR USE

- Close VC-154 and plug it into the wall outlet, you will notice that the ready light will come on, indicating that the VC-154 has begun preheating.
- It will take approximately 5 minutes to reach baking temperature; the ready light will go off.

- Open the VC-154; lightly coat the cooking plates with a little cooking oil, put the dough into the each of 6 forms, then put some fillings if necessary in the middle of each form. Cover with upper layer of dough and close the appliances.
- Close the lid. The ready light will go on again.
- Cook for about 7 to 10 minutes, the ready light goes off again, adjust the time to suit your own individual taste.

WARNING: Timing is giving here for reference only. The exact time of cooking depends on ingredients which were used.

- When food is cooked use the handle to open the lid. Remove the foods with the help of a plastic or wooden spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

TIPS

You could cook muffins or different cakes as well. Just choose Your favorite recipe and put it inside the appliance. The result will pleasantly surprise You.

CLEANING AND MAINTANCE

- Unplug the appliance and let it cool. The unit is easier to clean when it's slightly warm. There is no need to disassemble VC-154 for cleaning. Never immerse the appliances into water or place in dishwasher.
- Wipe cooking plates with a soft damp cloth to remove food residue. For baked on

food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the unit to moisten the food residue.

- Do not use anything abrasive that can scratch or damage the coating.
- Do not use metal utensils to remove your food; they can damage the non-stick surface.

STORAGE

- Never leave the device and electric connection ends of your device in a damp state. If they get wet unplug before drying and don't operate the appliance before having it dried completely.

SPECIFICATION

Power	1400W
Voltage	220-240V 50Hz
Temperature	180°C-205°C

SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to

replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period. Also warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorized by us.


More detailed information about warranty conditions and the list of authorized service centers please find in warranty card.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

RUS

Внимательно прочтите настоящее руководство по эксплуатации перед первым использованием прибора.

ОПИСАНИЕ ИЗДЕЛИЯ

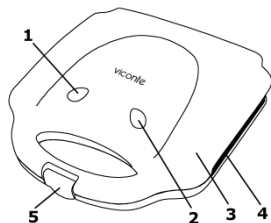

1. Индикатор нагрева
2. Индикатор работы
3. Корпус
4. Нагревающиеся рабочие панели
5. Блокировочный замок

ВАЖНЫЕ ПРАВИЛА ТЕХНИКИ БЕЗОПАСНОСТИ

- Данный прибор не предназначен для использования людьми (включая детей), у которых есть физические, нервные или психические отклонения или недостаток опыта и знаний за исключением случаев, когда за ними осуществляется надзор или проводится инструктаж лицом, отвечающим за их

безопасность. Необходимо осуществлять надзор за детьми с целью недопущения их игр с прибором.

- Убедитесь, что напряжение сети соответствует напряжению, указанному на приборе. Неправильное подключение может привести к его полному отказу. В этом случае гарантия не распространяется.
- Данное устройство предназначено для домашнего использования, не подходит для коммерческого использования.
- Запрещено использовать данный продукт вблизи легковоспламеняющихся или взрывчатых веществ, или во влажном помещении.
- Убедитесь, что устройство установлено на ровной и твердой поверхности. Не устанавливайте прибор на край или угол стола во избежание опрокидывания.
- Не перекручивайте и не перегибайте шнур, не закручивайте его вокруг прибора.
- Избегайте повреждений шнура. Запрещено перемещать прибор, удерживая его только за шнур или вилку. Для того чтобы отключить прибор от электросети, держите за вилку, ни в коем случае не тяните за провод.
- Запрещено погружать прибор и/или сетевой шнур прибора в воду, избегайте ставить прибор вблизи раковины.
- В случае падения или повреждения устройства и/или шнура питания не используйте прибор без проверки специалистом, так как внешне невидимые

повреждения могут создать угрозу Вашей безопасности.

- Во избежание ожогов, всегда держите прибор только за ручку. Во время работы прибор нагревается.
- Необходимо отключать прибор от электросети после каждого использования и перед чисткой.
- Не оставляйте без присмотра включенный прибор.

ВНИМАНИЕ: Не используйте VC-154 в вертикальном положении, переворачивать прибор можно только на время хранения.

ПЕРЕД ПЕРВЫМ ИСПОЛЬЗОВАНИЕМ

- Внимательно удалите всю упаковку.
- Протрите устройство влажной тряпкой, смоченной в мыльной воде.
НЕ ПОГРУЖАЙТЕ УСТРОЙСТВО В ВОДУ И НЕ ЛЕЙТЕ ВОДУ ПРЯМО НА ПОВЕРХНОСТЬ ПРИГОТОВЛЕНИЯ.
- Высушите бумажным или тканевым полотенцем.
- Для достижения наилучшего результата нанесите на поверхность приготовления небольшое количество масла. Примечание: При первом нагревании VC-154, может появиться небольшой дымок или запах. Это нормально для многих нагревательных приборов. Это не влияет на безопасность эксплуатации.

ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ

- Закройте VC-154 и вставьте штекер в розетку. Загорится световой сигнал готовности, показывая начало прогрева прибора.
- Для достижения рабочей температуры требуется около 5 минут. После этого сигнал готовности погаснет.
- Откройте VC-154, смажьте рабочую поверхность небольшим количеством масла, аккуратно разложите тесто в каждую из форм, затем положите начинку в центр каждой формы, если это необходимо. Сверху закройте каждую из формочек раскатанным кусочком теста и закройте электроприбор.
- Закройте крышку. Сигнал готовности загорится снова.
- Приготовление занимает около 7-10 минут, после чего сигнал готовности погаснет. Вы можете продолжить приготовление в соответствии с собственными предпочтениями.

ВНИМАНИЕ: Время приготовления указано для ознакомления. Точное время готовности будет зависеть от ингредиентов, которые были использованы.

- При готовности блюда откройте крышку за ручку. Пластиковой лопаткой достаньте блюдо. Не используйте металлические щипцы или нож, так как это может повредить антипригарное покрытие.
- После использования прибора выньте штекер из розетки и оставьте прибор открытым для охлаждения.

НА ЗАМЕТКУ

Вы можете также приготовить маффины, лукошки или различные кексы в кекснице. Просто выберите свой любимый рецепт и положите ингредиенты в устройство. Результат Вас приятно удивит.

ЧИСТКА И УХОД

- Отключите устройство от сети и дайте ему остыть. Чистку легче производить, если прибор еще немного теплый. Для чистки нет необходимости разбирать устройство. Не погружайте его в воду и не помещайте в посудомоечную машину.
- Для удаления остатков пищи с поверхностей приготовления используйте мягкие материалы. Для удаления пригоревших частиц нанесите немного воды с моющим средством и потрите неабразивной поверхностью, либо положите сверху влажную бумагу для увлажнения остатков пищи.
- Не используйте абразивные вещества или материалы, которые могут поцарапать или повредить антипригарное покрытие.

ХРАНЕНИЕ

- Не оставляйте устройство и его провод влажным. Если на прибор или его провод попала жидкость, отсоедините устройство от сети, полностью высушите сухой тряпкой, только после этого подсоедините прибор к электросети и продолжите работу.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Мощность	1400 Ватт
Напряжение	220-240В 50Гц
Рабочая температура	180°C-205°C

ГАРАНТИЯ

Гарантийный срок на продукцию фирмы «Viconte» – 12 месяцев со дня продажи. В течение этого времени все дефекты, возникшие в результате производственного брака или применения некачественных материалов, будут устранены бесплатно. Гарантия не распространяется на дефекты, возникшие из-за несоблюдения инструкции по эксплуатации, грубого обращения с прибором, использования устройства не по назначению. Также гарантия не распространяется на аксессуары. Гарантия аннулируется, если устройство ремонтировалось не в авторизованных пунктах сервисного обслуживания. Подробнее об условиях гарантии сказано в гарантийном талоне.

Производитель имеет право на внесение изменений в дизайн, комплектацию, а также в технические характеристики изделия в ходе совершенствования своей продукции без дополнительного уведомления об этих изменениях.

